



Install the seal into the housing, and then install the shaft from air side.

1A()

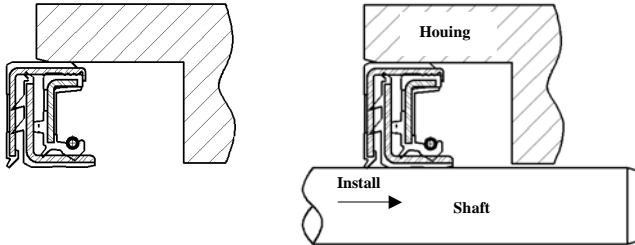


1B()

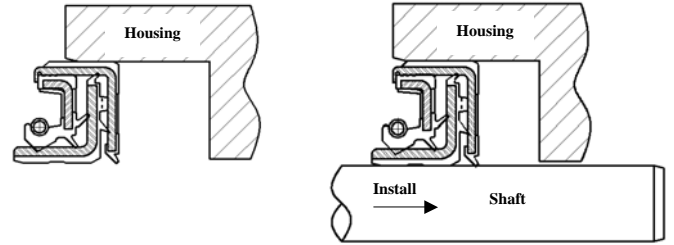


Install the seal into the housing, and then install the shaft from oil side.

2A()

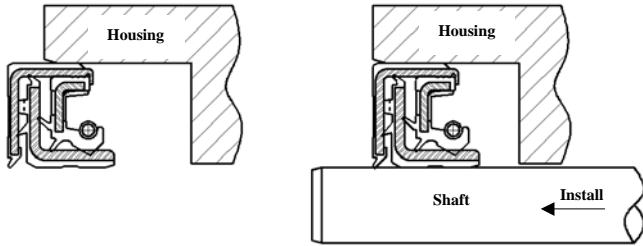


2B()

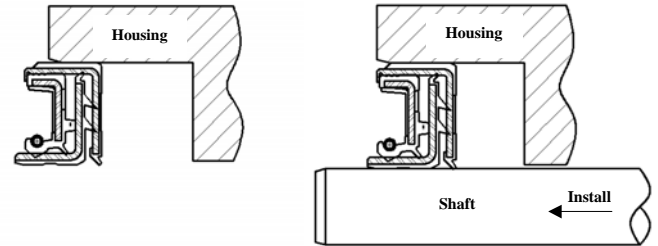

Install the seal into the fixed housing and shaft.

3A()

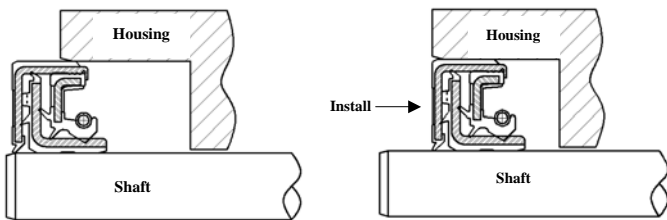

3B()

