



SEAL TOOLS



**Depth & Width
Caliper**

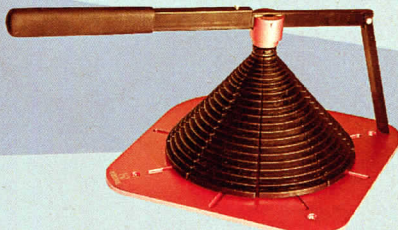

Seal Stretcher

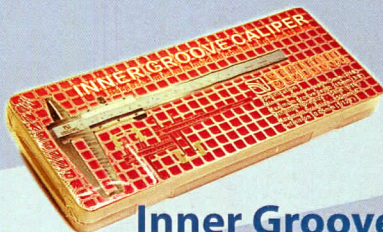

**Inner Groove
Caliper**



Seal Hook Kit



O-Ring Pick

SIL

NEW ZEALAND

Auckland | Hamilton | Wellington | Christchurch | Dunedin
www.sealimports.co.nz

AUSTRALIA

Brisbane | Townsville | Melbourne | Sydney | Adelaide
www.sealimports.com.au

SEAL IMPORTS LTD

IMPORTERS AND STOCKISTS OF:

HYDRAULIC AND PNEUMATIC SEALS, O-RINGS, BUSHES AND ROTARY OIL SEALS



Scraper & Remover Set



Seal Clasper



Seal Twistor



OR Recogniser




Bore Tape




**Ultra Sharp
Cutter**

GROOVE DETECTOR METAL

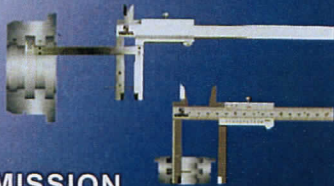

MISSION
Get the groove depth

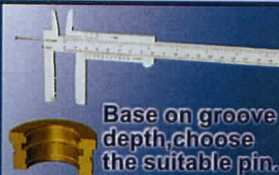

Base on groove depth, choose the suitable pin.



Selection of pins, 10mm, 20mm, 3/8", 3/4".



Push the pin to the bottom of groove.



Groove depth = Length of pin - measurement.

OR RECOGNISER



MATERIAL?
IT GIVES YOU A CHANCE TO ASK



Slip jumper to anchor.




Push to release jumper.



Take aim at the o-ring.




Check bouncing position.

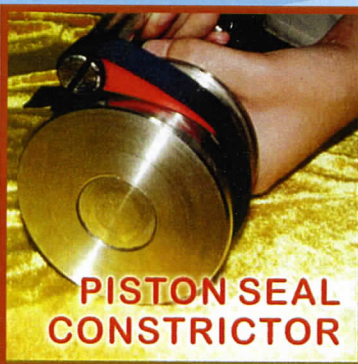


**PISTON SEAL
CONSTRICTOR**



Lubricate piston seal.

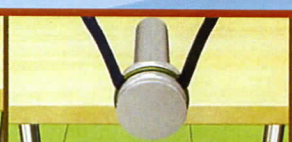

Pull the rings with tapes.

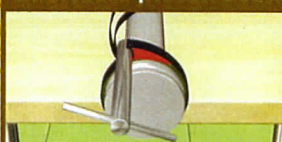


Put the PU pad between.




Pull the rings with tapes.



SEAL DIGGER

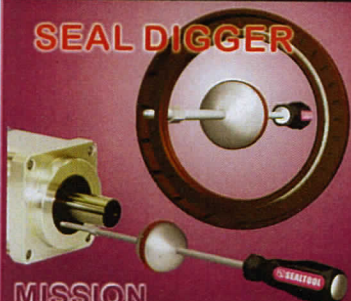

MISSION
Shaft surface protection

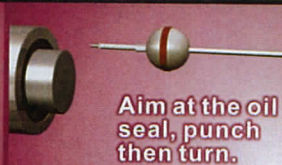

Aim at the oil seal, punch then turn.

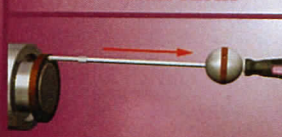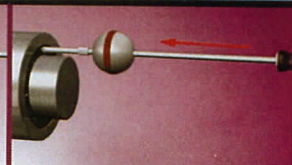

SIL

SEAL IMPORTS LTD

SEAL TWISTOR



MISSION

Seal lip protection

CONTENTS


S (20-30mm)

M (30-50mm)

L (50-70mm)



XL (70-165mm)

Handle Holder

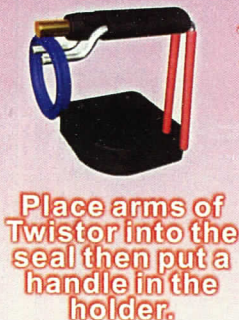


Place arms of Twistor into the seal then put a handle in the holder.

Twist the seal with guiding hand.

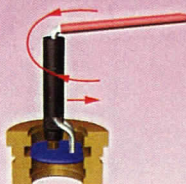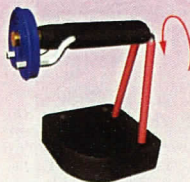

Lay the seal into the groove of the gland.

Turn the handles back entirely the pull out from the gland.

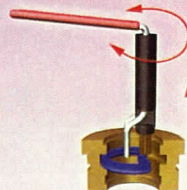

NEW ZEALAND

Auckland: 297 Neilson Street, Onehunga, Auckland 1061 Ph: +64 9 636 5239 Fax: +64 9 636 5242

Hamilton: 40 Killarney Road, Frankton, Hamilton 3204 Ph: +64 7 847 4439 Fax: +64 7 847 9663

Wellington: 28 Udy Street, Petone, Wellington 5012 Ph: +64 4 566 6754 Fax: +64 4 566 6753

Christchurch: 29 Nga Mahi Road, Sockburn, Christchurch 8042 Ph: +64 3 341 8043 Fax: +64 3 341 8037

Dunedin: 6-8 Mason Street, Dunedin 9016 Ph: +64 3 479 2484 Fax: +64 3 474 9253

AUSTRALIA

Townsville: 602 Ingham Road, Bohle 4814, Townsville QLD Ph: +61 7 4774 3756 Fax: +61 7 4774 3475

Brisbane: 11 Iris Place, Acacia Ridge 4110, Brisbane QLD Ph: +61 7 3711 4004 Fax: +61 7 3711 4446

Sydney: Unit 3 / 163 Prospect Highway, Seven Hills, Sydney, NSW 2147 Ph: +61 2 9838 4033 Fax: +61 2 9838 4099

Melbourne: 45 Osborne Ave, Springvale, Melbourne VIC 3171 Ph: +61 3 9545 7200 Fax: +61 3 9545 7299

Adelaide: Unit 2/209 Cormack Road, Wingfield 5013, Adelaide SA Ph: +61 8168 1000 Fax: +61 8168 1099